## Oil Country Lathe Chucks & Accessories



## Spare Jaws for PEO Series

Hard jaws, supplied as supplement or as spares, must be ground on the chuck, otherwise centering accuracy does not conform the limits

 
## Heavy Duty Serrated Hard Top Jaws – 1-Piece

 


 


For Chuck Diameter (Inch)	A (Inch)	B (Inch)	C (Inch)	D (Inch)	E (Inch)	F (lnch)	G (Inch)	H (Inch)	J (Inch)	K (Inch)	N (Inch)	O (Inch)	P (Inch)	Code
20	5.34	2.56	3.23	0.87	1.30	0.50	0.75	2.25	0.25	1.50	0.83	2.05	3.37	356325
25 & 32	5.34	2.56	3.82	0.94	1.38	0.50	0.75	2.25	0.25	1.50	1.10	2.05	3.37	356326

## Heavy Duty Serrated Hard Master Jaws – 1-Piece









For Chuck Diameter (Inch)	A (Inch)	B (Inch)	C (Inch)	D (Inch)	E (Inch)	F (Inch)	G (Inch)	H (Inch)	J (Inch)	K (Inch)	L (Inch)	S (Inch)	M Thread	Code
20	6.54	2.36	2.56	0.79	0.79	0.49	0.75	2.25	0.28	1.50	1.42	0.13	3/4-10	356327
25 & 32	8.86	3.15	2.56	0.98	0.98	0.49	0.75	2.25	0.28	1.50	1.30	0.13	7/8-9	356328