



## External Tool Holders

### STGCR/L for Positive Triangular TC\_\_ Inserts

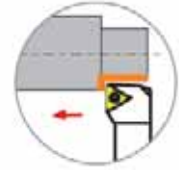

APPLICABLE INSERT

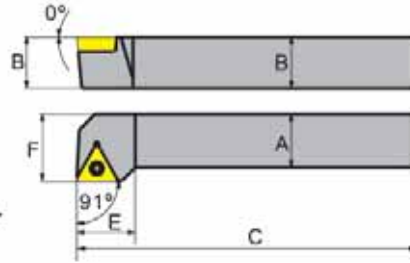

RIGHT HAND SHOWN

#### Right Hand

Type STGCR/L	A (Inch)	B (Inch)	C (Inch)	E (Inch)	F (Inch)	Applicable Inserts	Code
06-2	0.375	0.375	2.50	0.50	0.500	TC_21.5	534051
08-2J	0.500	0.500	3.50	0.50	0.625	TC_21.5	534052
10-2A	0.625	0.625	4.00	0.50	0.750	TC_21.5	534053
10-3B	0.625	0.625	4.50	0.83	0.750	TC_32.5	534054
12-3B	0.750	0.750	4.50	0.83	0.875	TC_32.5	534055
16-3D	1.000	1.000	6.00	0.83	1.125	TC_32.5	534056

#### Left Hand

Type STGCR/L	A (Inch)	B (Inch)	C (Inch)	E (Inch)	F (Inch)	Applicable Inserts	Code
06-2	0.375	0.375	2.50	0.50	0.500	TC_21.5	534061
08-2J	0.500	0.500	3.50	0.50	0.625	TC_21.5	534062
10-2A	0.625	0.625	4.00	0.50	0.750	TC_21.5	534063
10-3B	0.625	0.625	4.50	0.83	0.750	TC_32.5	534064
12-3B	0.750	0.750	4.50	0.83	0.875	TC_32.5	534065
16-3D	1.000	1.000	6.00	0.83	1.125	TC_32.5	534066

#### Accessories

##### Screw



For Type STGCR/L	Code
06-2J, 08-2J, 10-2A	210350
10-3B, 12-3B, 16-3D	210351

##### Torx® Key



For Type STGCR/L	Torx® Key	Code
06-2J, 08-2J, 10-2A	T7	549505
10-3B, 12-3B, 16-3D	T15	302319