


## Milling Machine Adapters

### For Tools with Morse Taper Tang

#### For Changing from CAT Shank to MT Socket

Value Line

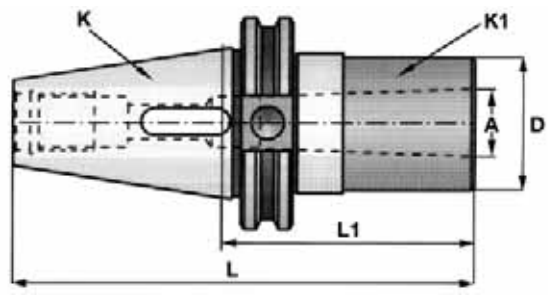


K Taper	K1 Morse Taper	L1 (Inch)	L (Inch)	A (Inch)	D (Inch)	Code
CAT40	MT2	2-1/4	4-15/16	45/64	1-1/4	827666
CAT40	MT3	2-49/64	5-29/64	15/16	1-3/4	827667
CAT40	MT4	3-5/8	6-5/16	1-15/64	2	827668
CAT50	MT2	2	6	45/64	1-1/4	827669

K Taper	K1 Morse Taper	L1 (Inch)	L (Inch)	A (Inch)	D (Inch)	Code
CAT50	MT3	2-1/2	6-1/2	15/16	1-5/8	827670
CAT50	MT4	3-3/8	7-3/8	1-15/64	2	827671
CAT50	MT5	3-3/4	7-3/4	1-3/4	2-3/4	827672

#### For Changing from BT Shank to MT Socket

Value Line

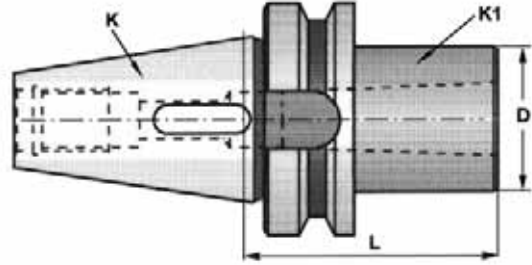

K Taper	K1 Morse Taper	D (Inch)	L (Inch)	Code
BT 40	MT1	1	1-3/4	827673
BT 40	MT2	1-1/4	2-3/8	827674
BT 40	MT3	1-9/16	3	827675
BT 40	MT4	2	3-9/16	827676

K Taper	K1 Morse Taper	D (Inch)	L (Inch)	Code
BT 50	MT2	1-1/4	1-3/4	827677
BT 50	MT3	1-9/16	1-3/4	827678
BT 50	MT4	2	3	827679
BT 50	MT5	2-3/4	4-1/8	827680