


## Precision Lathe Chucks & Accessories



### Spare Jaws for PO Series (continued)


Hard jaws, supplied as supplement or as spares, must be ground on the chuck, otherwise centering accuracy does not conform the limits

#### Hard Master Jaws – 3-Piece Sets

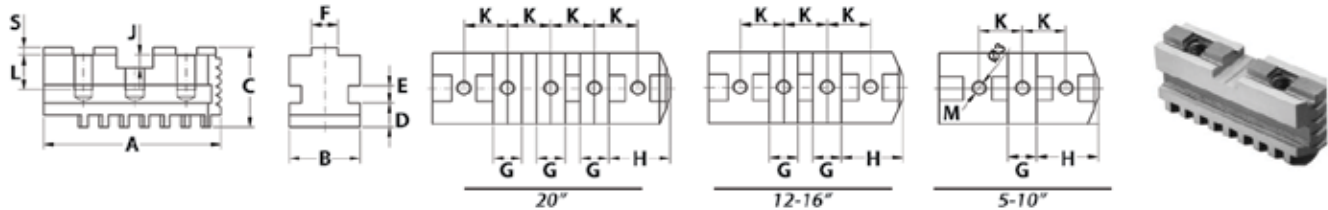

For Chuck Diameter (Inch)	B (Inch)	D (Inch)	E (Inch)	F (Inch)	G (Inch)	H (Inch)	J (Inch)	K (Inch)	L (Inch)	A OAL (Inch)	S (Inch)	M Thread	Weight (lbs)	Code
6	0.79	0.31	0.31	0.31	0.50	1.12	0.16	0.75	0.55	2.56	0.13	3/8-16	1.20	410152
8	0.98	0.35	0.39	0.31	0.50	1.37	0.16	0.87	0.55	3.11	0.13	3/8-16	2.10	410153
10	1.10	0.43	0.47	0.50	0.75	1.56	0.16	1.06	0.63	3.62	0.13	1/2-13	3.20	410154
12	1.26	0.50	0.47	0.50	0.75	1.87	0.16	1.25	0.63	4.33	0.13	1/2-13	5.10	410155
16	1.42	0.59	0.55	0.50	0.75	2.25	0.28	1.50	0.87	5.12	0.25	5/8-11	7.30	410156
20	1.57	0.63	0.55	0.50	0.75	2.25	0.28	1.50	1.26	6.54	0.25	3/4-10	14.40	410157
25	1.97	0.63	0.55	0.50	0.75	2.25	0.28	1.50	1.26	8.27	0.25	3/4-10	27.10	356312

#### Soft Top Jaws – 1 Piece

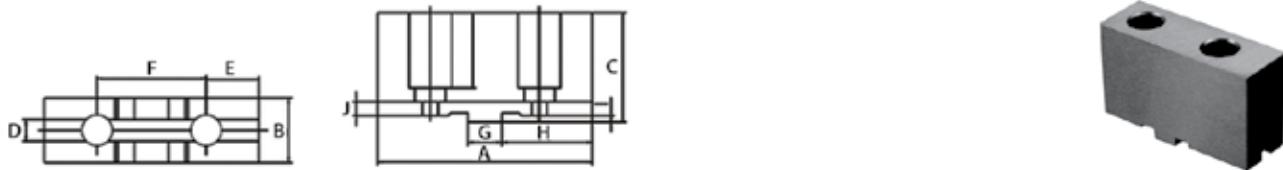

For Chuck Diameter (Inch)	A (Inch)	B (Inch)	C (Inch)	D (Inch)	E (Inch)	F (Inch)	G (Inch)	H (Inch)	I (Inch)	J (Inch)	M Thread	Weight (lbs)	Code
6	3.07	1.00	1.63	0.31	0.84	1.50	0.50	1.34	0.13	0.16	3/8-16	1.01	410146
8	3.54	1.06	1.71	0.31	0.95	1.75	0.50	1.57	0.13	0.16	3/8-16	1.43	410147
10	4.17	1.28	2.03	0.50	1.08	2.12	0.75	1.77	0.13	0.16	1/2-13	2.54	410148
12	4.72	1.57	2.16	0.50	1.21	2.50	0.75	2.09	0.13	0.16	1/2-13	3.53	410149
16	5.51	1.65	2.54	0.50	1.35	3.00	0.75	2.48	0.25	0.16	5/8-11	4.85	410150
20	5.51	1.97	2.93	0.50	1.35	3.00	0.75	2.48	0.25	0.16	3/4-10	5.29	410151
25	6.30	2.05	3.29	0.50	1.35	3.00	0.75	2.48	0.25	0.16	3/4-10	9.26	411044